 




## Remote Control



**PHONAK**

communication systems

English

### User manual


The **invisity remote control** is a waterproof handheld key ring format device. It is used to discretely change the frequency/channel on the **invisity** 4-channel device. To ensure best results, the remote control should be operated within distance of no more than 60 cm (23") from the receiver (Fig.1).

The **invisity remote control** requires programming together with the **invisity** receiver. To program both devices, please follow the user manual of the invisity programming unit (IPU).



Fig.1

~60 cm  
(23 inches)

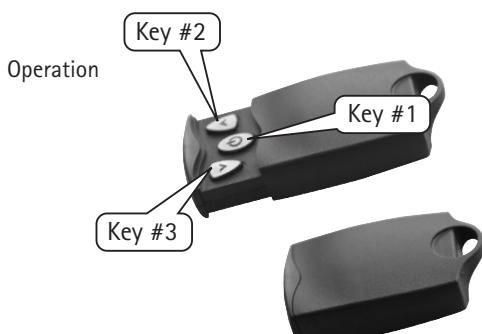


Pull the unit from the top to reveal the controls. The push-buttons are used for the following functions.

**Programming mode** Simultaneously push key #2 and #3 for a short time (< 1 sec) to get the red light. The programming mode is now active either for 3 minutes or till you push one of the keys for a short time. Place the RC **Invisity** into the Programmer Unit (IPU) as indicated on your screen. Start the programming procedure.

**Change of channel** Push key #1 equal times to set the required channel (e.g. push 3x for channel (e.g. push 3x for channel 3, 4x for channel 4).

**Scan frequency** Push key #1 more than 2 sec to initiate scan mode, invisity will stop on the first frequency scanned (only programmed frequencies are recognized), push 2 sec again to continue scan.

**Battery end of live control** Push simultaneously key #2 and #3 for 3 sec to get red LED light. Constant light means the battery is OK. Blinking light means the battery is weak. To change the battery, please contact your Phonak distributor.

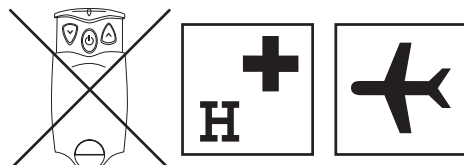

Warning: do not use your RC invisity close to hospital or in airplane.



**Phonak Communications AG**  
Länggasse 17  
CH-3280 Murten  
Switzerland



029-3048

Phone +41 (0)26 672 9672  
Fax +41 (0)26 672 9677  
E-Mail [info@phonakcom.ch](mailto:info@phonakcom.ch)  
[www.phonakcom.ch](http://www.phonakcom.ch)

**PHONAK**